
DOOR ADJUSTMENT

Hettich slide-on hinges offer all the benefits of three-dimensional adjustability (vertical, lateral and depth) to get doors perfectly angled.




Vertical Adjustment: To adjust one of the doors up or down, loosen all four of the vertical alignment screws (two per hinge). Gently slide the door up or down to the desired position and tighten the screws.

Lateral Adjustment: To adjust one of the doors side-to-side, turn both of the horizontal alignment screws (one per hinge) in the same direction. Adjustment left or right will vary depending on which door you are adjusting.

Rotational Adjustment: To rotate a door, turn the horizontal alignment screw in one direction for the top hinge, and in the opposite direction for the bottom hinge. Adjustment clockwise or counter-clockwise will vary depending on which door you are adjusting.

Depth Adjustment: To adjust a door in and out, loosen the depth alignment screws, then move the door to the desired position and tighten the screw.

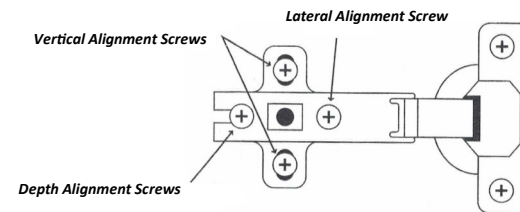

The Wright Kitchen

4087 Harvester Road, Unit 4

Burlington, ON L7L 5M3

Tel: 905 639 1099